

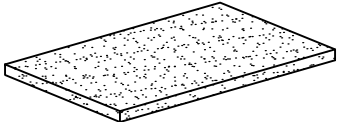
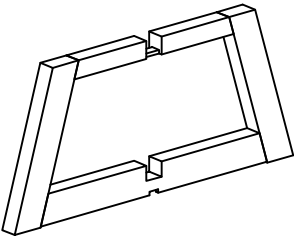


ASSEMBLY INSTRUCTION COFFEE TABLE


Pages

1/2

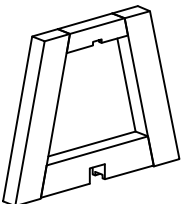


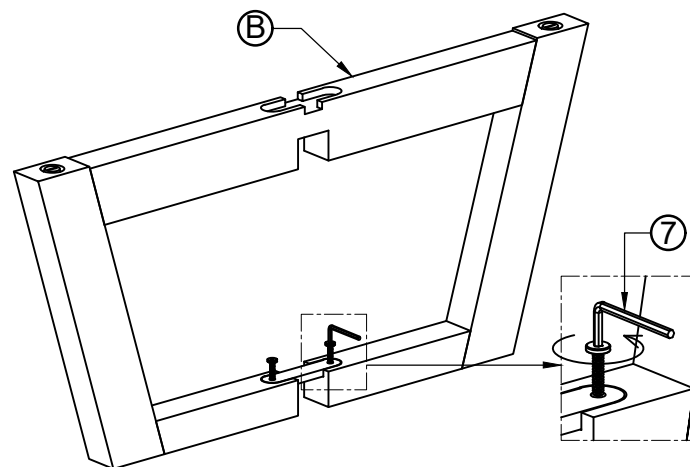

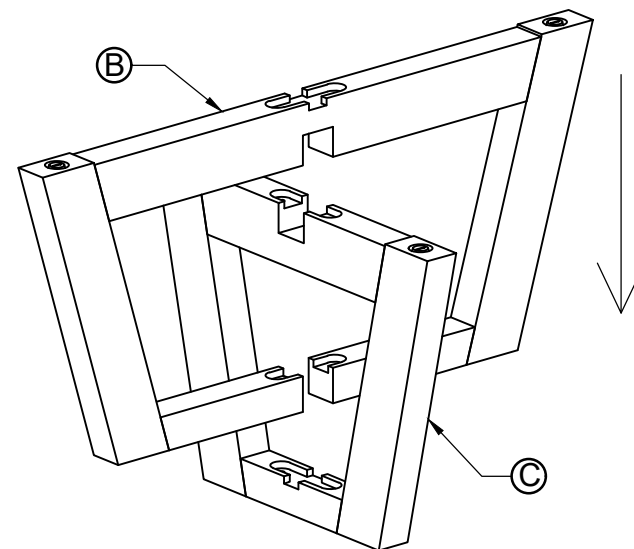

No	Name of Component	Q.ty
Ⓐ		1
Ⓑ		1
Ⓒ		1




Take out the wooden bracket




STEP 1 STEP 2
STEP 3 STEP 4

No	Name of Hardware	Q.ty
①	X Bracket 	2
②	Bolt M6x20 	16
③	Washer M6 	16
④	Spring washer M6 	16
⑤	L Bracket 	8
⑥	Screw Ø4x20 	16
⑦	Allen key K4 	1

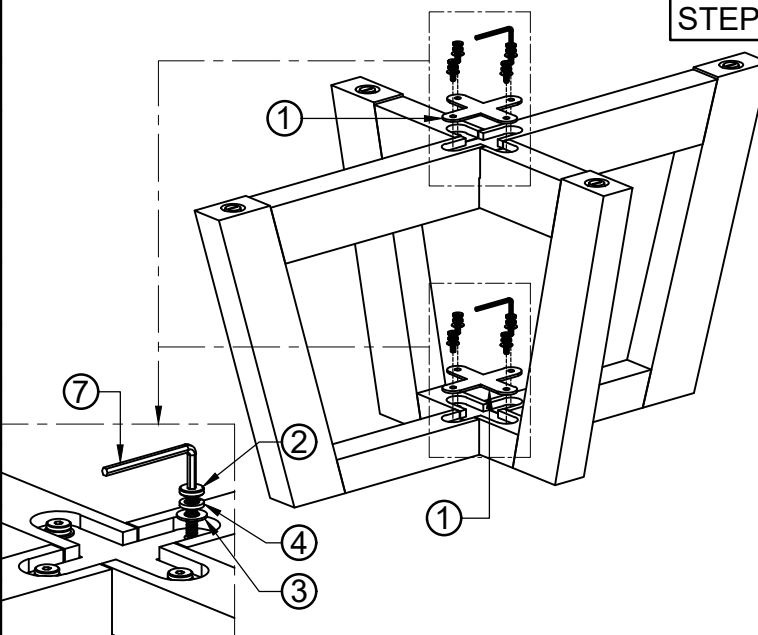




Note: Don't over tighten

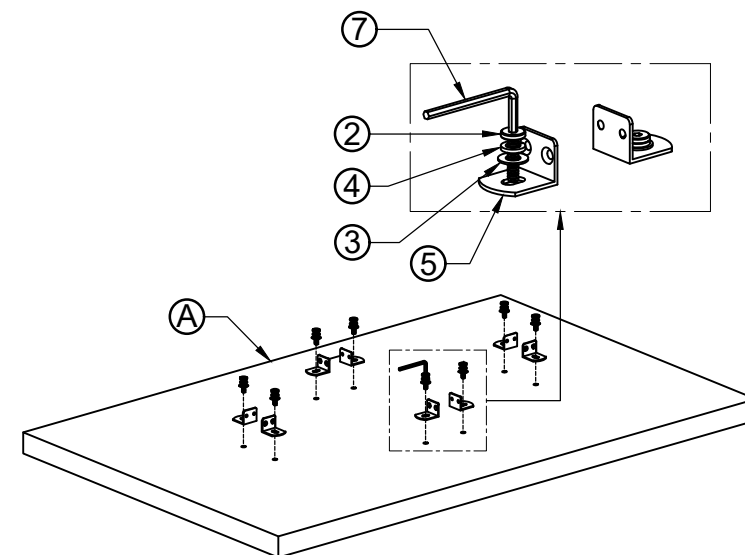

ASSEMBLY INSTRUCTION COFFEE TABLE

Pages

2/2

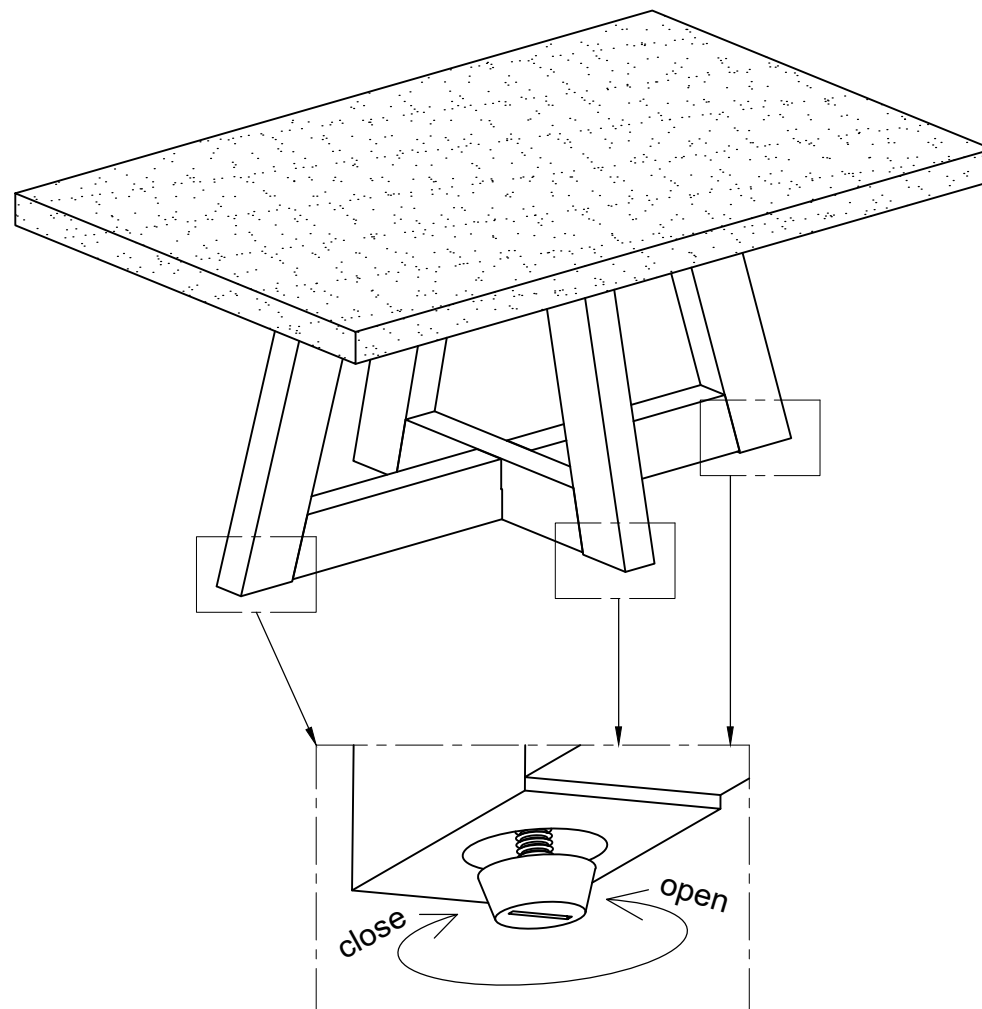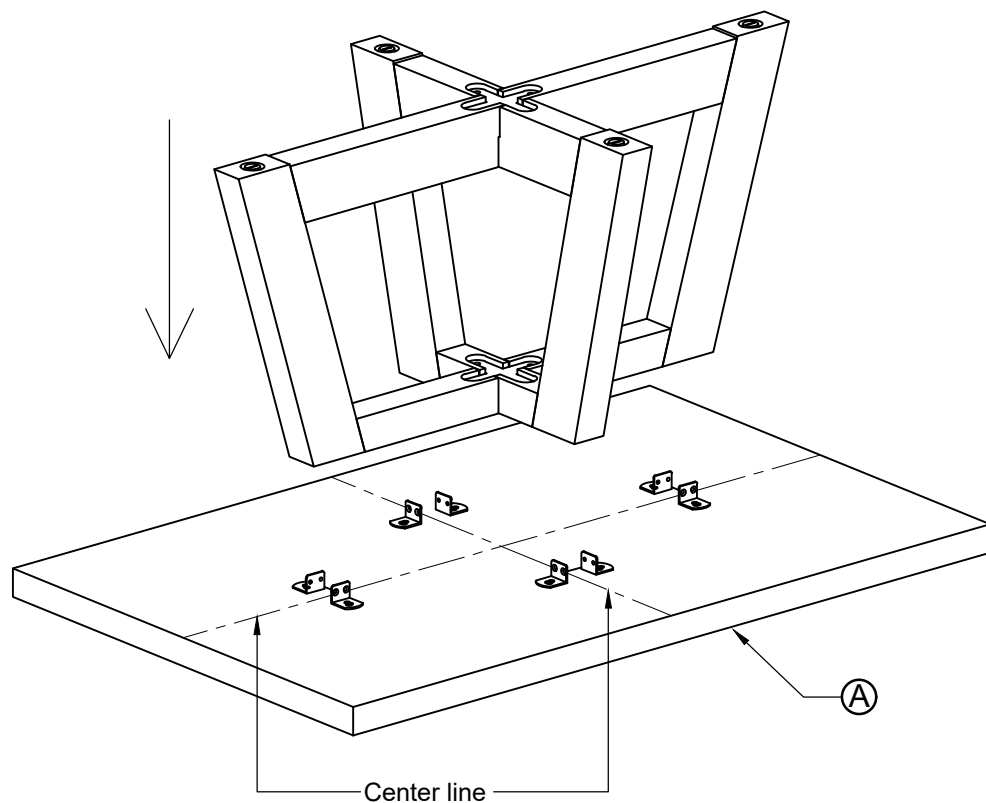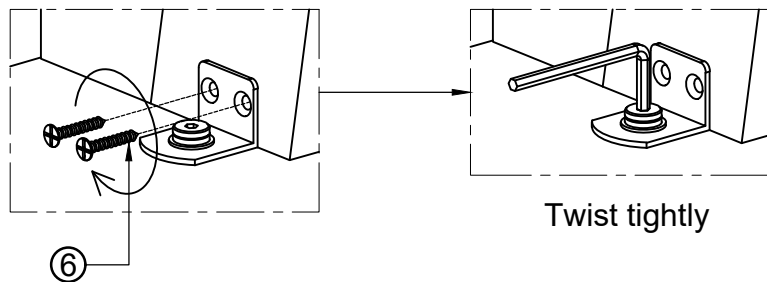

STEP 5 FINAL