
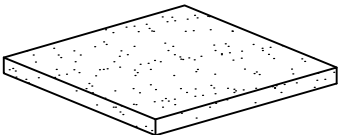
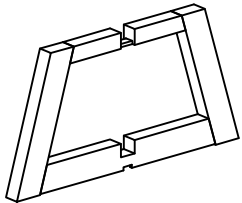



# ASSEMBLY INSTRUCTION

## SQUARE COFFEE TABLE


Pages

1/2

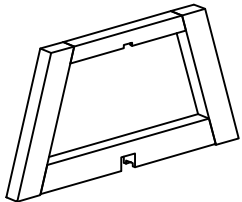


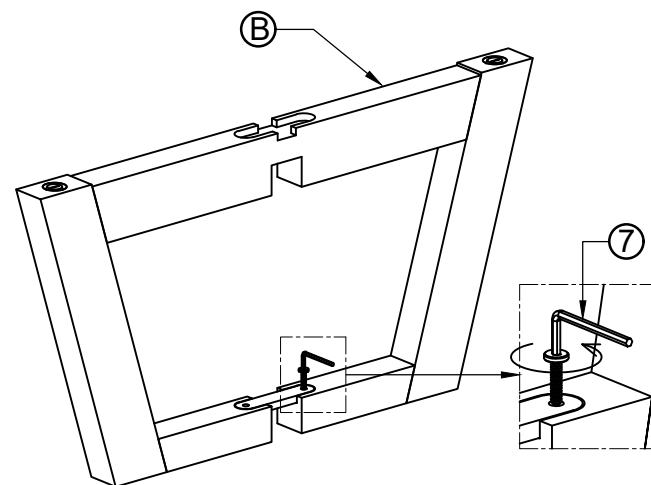

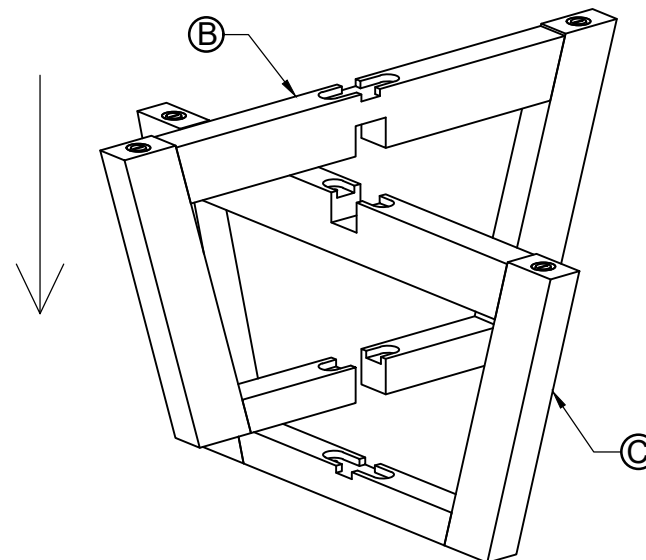

No	Name of Component	Q.ty
(A)		1
(B)		1
(C)		1




Take out the wooden bracket




STEP 1 STEP 2  
STEP 3 STEP 4

No	Name of Hardware	Q.ty
(1)	X Bracket 	2
(2)	Bolt M6x20 	16
(3)	Washer M6 	16
(4)	Spring washer M6 	16
(5)	L Bracket 	8
(6)	Screw Ø4x20 	16
(7)	Allen key K4 	1

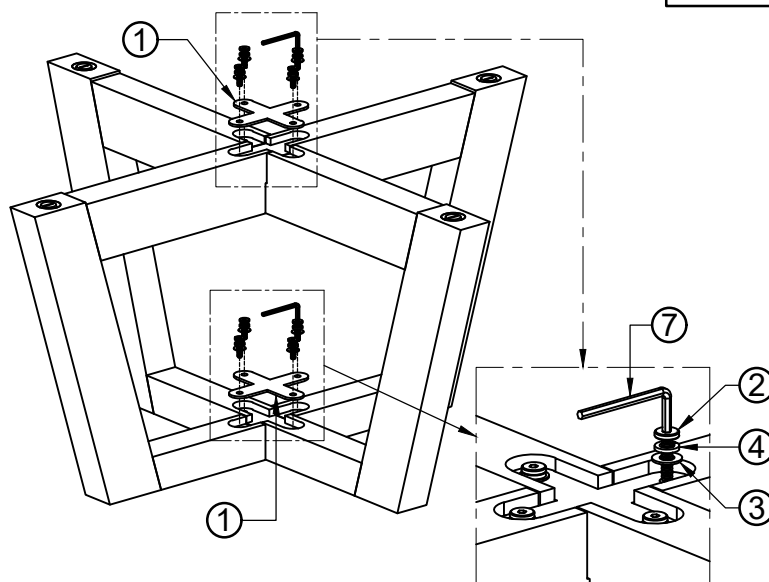


Note: Don't over tighten

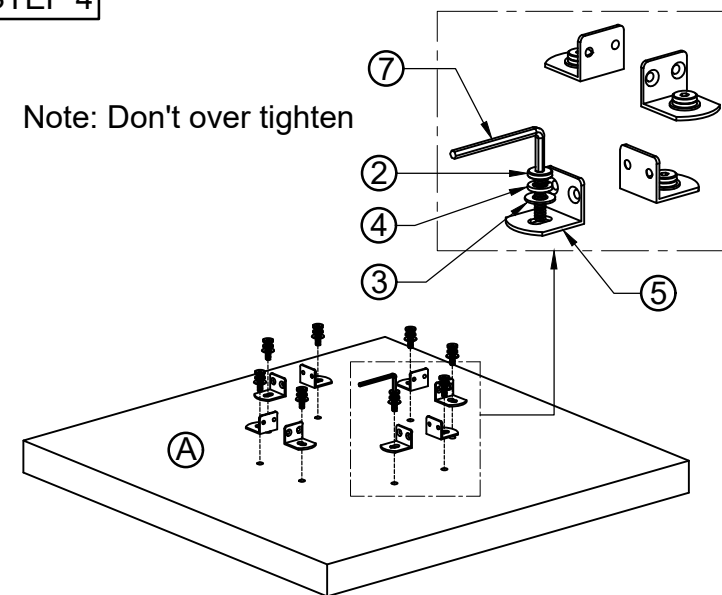


# ASSEMBLY INSTRUCTION SQUARE COFFEE TABLE

Pages

2/2

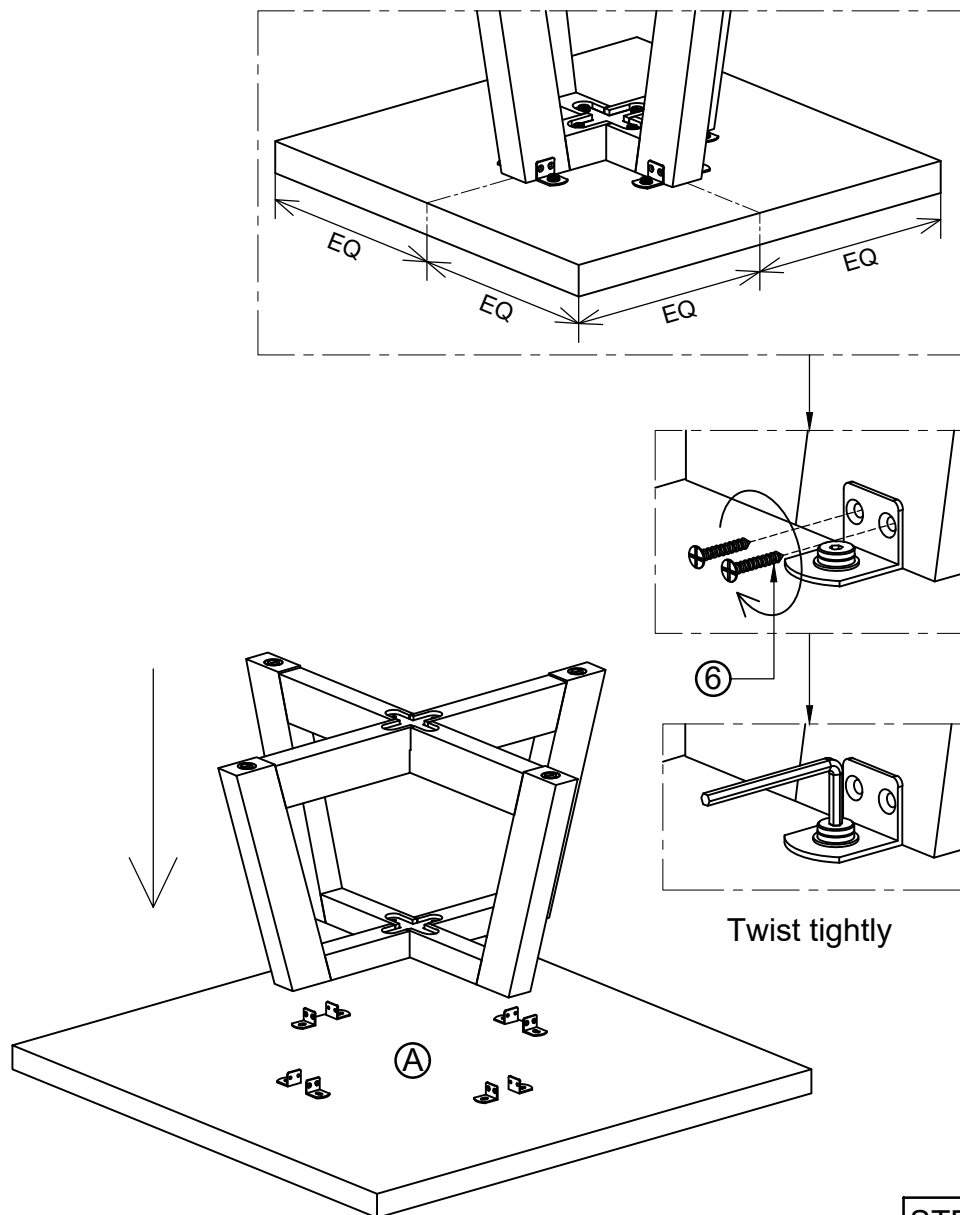

Twist tightly

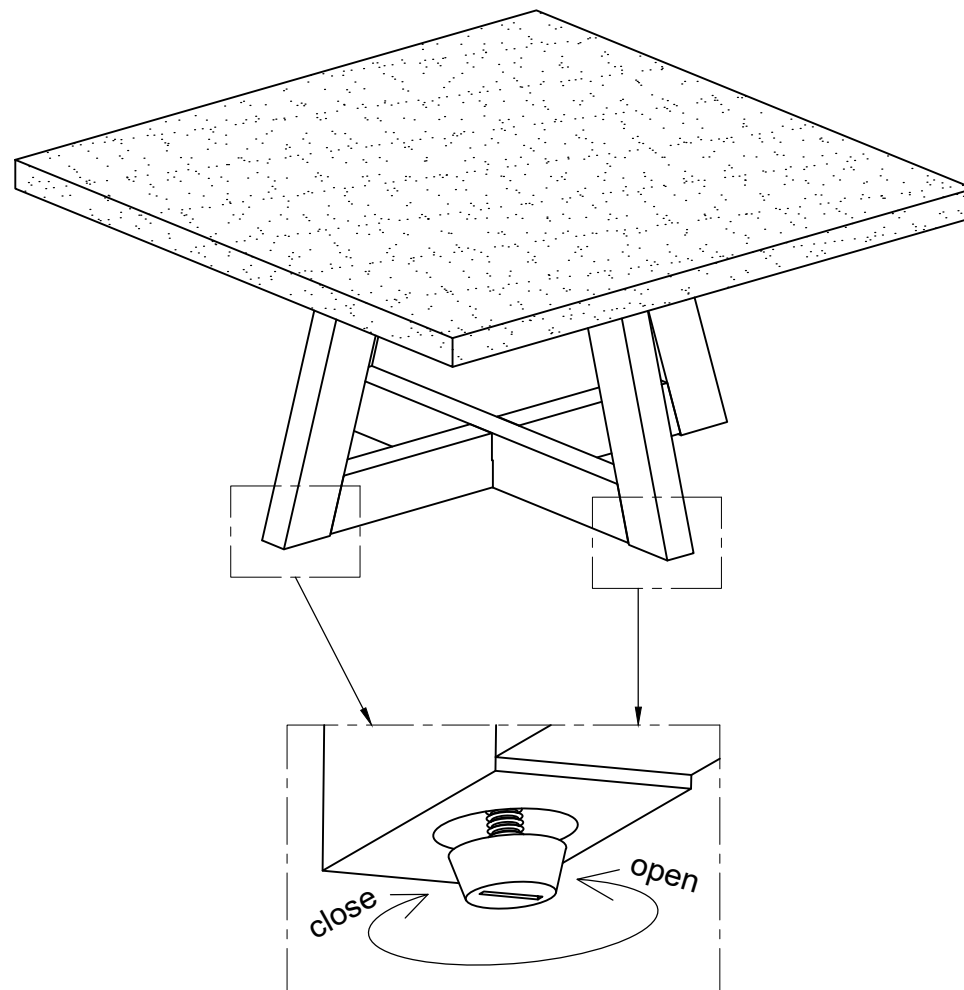

STEP 5 FINAL